REPLACEMENT CONSUMABLES SUITABLE FOR PLASMA CUTTING SYSTEM HYPERTHERM® HPR® 260 XD MILD STEEL

CORRECT FITTING OF THE PARTS: THERMACUT SHIELD CAP + SHIELD + INNER RETAINING CAP MUST BE USED AS A SET. NOT INTERCHANGEABLE WITH OFM DESIGN






220761-UR 220764-UR



220757-UR 220760-UR

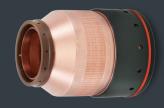

THERMACUT ELECTRODES HAS TO BE USED WITH THERMACUT DESIGN COOLING TUBE, OTHERWISE IT DOESN'T FIT TO THE TORCH, THERMACUT COOLING TUBE CAN BE USED FOR THERMACUT DESIGN ELECTRODES AND FOR ORIGINAL DESIGN TOO.

ELECTRODES 30 - 260 AMP.



220340-UR



APPLY A LIGHT COATING OF SILICONE GREASE TO ALL O-RINGS BEFORE ASSEMBLY.

THERMACUT SHIELD MUST SEAT FIRMLY INSIDE THERMACUT SHIELD CAP. IMPROPER INSTALLATION WILL CAUSE PREMATURE FAILURE OF CONSUMABLES. THERMACUT PARTS DO NOT NEED SPECIAL GAS SETTINGS.

A GLOBAL PROVIDER OF THERMAL CUTTING TECHNOLOGY

